TUNING AND CALIBRATION 959 LEAK DETECTOR

Daily

- 1. Install the calibrated leak in the testport with the leak valve open.
- 2. Press START
- 3. When the test port pressure drops below the transfer set point it will automatically switch to TEST
- 4. Close the leak valve and see if the leak rate meter drops. If the leak rate dropped you only need to optimize the signal.
- 5. Open the leak valve.
- 6. Adjust the ION Pot (potentiometer) up or down until you reach a maximum leak rate reading.
- 7. Close the leak valve to verify that you are seeing helium. If it doesn't respond adjust for the next ion peak until you get a down scale reading when the leak valve is closed.
- 8. Adjust the FOCUS control until you reach a maximum leak rate.
- 9. Close the leak valve.
- 10. Adjust the ZERO controls for a zero leak rate on the most sensitive scale (10-9).
- 11. Open the leak valve
- 12. Using the CALIBRATE control adjust the leak rate reading to match the calibrated leak value.

THE SYSTEM IS NOW TUNED AND CALIBRATED

